

The FOXTEL Remote Control

FOXTEL

Takes you from the TV Guide (or any FOXTEL Digital screen) to the last channel you were watching
Takes you back to FOXTEL after you have been using 'AV mode'

av

Switches to 'AV mode', to use your VCR, or other item connected through your FOXTEL iQ2

on demand

To order ON DEMAND movies and pay-per-view events

tv guide

Displays your FOXTEL Digital Guide's programme listings

setup

Displays the Setup screen, to alter the FOXTEL iQ2's settings

vol + and -

Changes the volume up or down

mute

Turns the sound on or off

back

Jumps back to the previous screen

rewind

Rewinds the programme

pause

Pause the programme or starts a 'Live Pause' recording

play

Plays a recorded programme

fast forward

Fast forwards the programme

stop

Stops playback of the programme

record

Records the programme



Puts your set-top unit into or out of standby

active

Displays the Active menu for FOXTEL's range of interactive services

planner

Displays your Personal Planner

i

Displays more information about a programme

ch + and -

Changes channel and pages up and down through listings in the TV Guide and Personal Planner

arrow buttons



Moves the highlight around the screen

select

Confirms a choice or makes a selection
Also displays the i-search banner

help

Tunes to the Customer Care channel or displays help information

colour buttons

Use to select the matching colour option shown on screen, or as explained in this User Guide. Also, the red button launches an active service when you see the red button on your TV screen

number buttons (0-9)

Use to change channel, enter numbers and select on-screen options